#### WS-01

### Weather Station

## 1. Features

- Time display with 12-hour and 24-hour display format
- Calendar from 2000 to 2099 (Default 2005)
- Temperature display with Celsius and Fahrenheit exchange
- Temperature range

Indoor :  $-50^{\circ}$ C to  $70^{\circ}$ C( $-58^{\circ}$ F to  $158^{\circ}$ F) Outdoor:  $-50^{\circ}$ C to  $60^{\circ}$ C( $-58^{\circ}$ F to  $140^{\circ}$ F)

- Humidity range: -20% to 90% R.H.
- Alarm with 5 minutes snooze
- Key tone
- Blue led backlight

# 2. Operations

• There are four buttons as below:

#### Photo 1

[MODE], [SET], [ADJ], [SNZ/LIGHT].

• When the IC is reset, the LCD will light up for 1 second and beep sound is generated. After that, the IC enter normao time display with indoor temp and humidity display. Pressing [MODE] will have the following modes sequences:

Time→Alarm→Date→Lo Alarm→Hi Alarm→In/Out setting→Time

Photo 2

- Time setting mode
  - a. Press [SET] for 2 seconds will enter time setting mode when the IC is time mode
  - b. Press [ADJ] to toggle the time display format .
  - c. Press [SET] will shift the setting digit to minute-hour, Press [ADJ] to increase .

# Note:

- a. When Press [ADJ] for 2 seconds will advance the setting digits in 8HZ rate
- b. If [MODE] is pressed during the setting, it will exit the setting mode.
- c. If there is no key pressed for 10 seconds the IC have an auto-exit function.

## Photo 3

- Alarm setting mode
  - a. Press [SET] for 2 seconds in alarm mode will enter the alarm setting mode
  - b. Press [ADJ] will have the following sequence of alarm states:

All off→Alarm on→Chime on→All on→All off

c: By combination of pressing [SET] and [ADJ] will set the alarm minutes and Hour value if the alarm is on .

Photo 4

Note:

- a. When Press [ADJ] for 2 seconds will advance the setting digits in 8HZ rate
- b. If [MODE] is pressed during the setting, it will exit the setting mode.
- c. If there is no key pressed for 10 seconds the IC have an auto-exit function.

## Date setting mode

- a. Press [SET] for 2 seconds in Date Mode will enter Date Setting Mode.
- b. By combination of pressing [SET] and [ADJ] will set the data in the following sequences: Year set→Month set→Date set→Date display mode

Photo 5

## • Lo Alarm setting mode

Press [SET] for 2 seconds in Lo Alarm Mode will enter the setting for this mode. The setting sequence is as follows:

Lo Temp on/off  $\rightarrow$ Lo Temp value  $\rightarrow$ Lo Humid on/off  $\rightarrow$ Lo humid value  $\rightarrow$ Lo Alarm Mode Photo 6

## •Hi Alarm setting mode

Press [SET] for 2 seconds in Hi Alarm Mode will enter the setting for this mode. The setting sequence is as follows:

HI Temp on/off →HI Temp value →Hi Humid on/off →Hi humid value →Hi Alarm Mode

Photo 6

• Select the display for indoor or outdoor temperature

Press [MODE] for 5 times in Time Display Mode will enter this mode. Press [ADJ] will toggle The IN and OUT icon. Press [MODE] or simply wait for 10 seconds to exit this mode.

### • Note:

- a. 2 AAA batteries Operating.
- b.The IC will return to Time Display Mode when there is no any key pressed for More than 10 seconds  $_{\circ}$